C008723 Virtual COM USB-Bluetooth Adapter

Features

- Bluetooth pairing and unpairing
- USB type A plug interface
- Virtual COM port device driver
- Integrated antenna
- Bluetooth Class 1 Radio
- Data encryption
- Automatic Bluetooth connection
- LED indicator
- Configuration via USB
- Power from USB port

Specifications



Bluetooth Bluetooth v2.1 + EDR Class 1 Radio

- USB USB specification 2.0 compliant USB full speed 12Mbps transmission
- USB type A plug connector

COM	Baud rate: 1200bps to 115200bps
	Data length: 8-bit
Power	USB bus powered, idle 19mA, normal 45mA, maximum 100mA.

Software 32-bit and 64-bit virtual COM port device driver for Microsoft Windows 8, Windows 7, Windows Vista, Windows XP.

Typical Applications

Virtual COM Port for Bluetooth enabled devices

Install the virtual COM port device driver on your PC. Follow the configuration instruction to pair this USB-Bluetooth adapter with your Bluetooth enabled device, and set USB-Bluetooth adapter's COM port settings.

The USB-Bluetooth adapter will automatically connect with your Bluetooth enabled device. This creates a wireless connection between USB port and your Bluetooth enabled device, and your application software can access this connection through the virtual COM port.

USB to RS232 over Bluetooth

Install the virtual COM port device driver on your PC. Follow the configuration instruction to pair this USB-Bluetooth adapter with a Bluetooth-RS232 adapter. Set the same settings for USB-Bluetooth adapter and Bluetooth-RS232 adapter. This creates a wireless connection between USB port and RS232 port, and your application software can access this connection through the virtual COM port.

System Requirements

Configuring C008723 adapters on a PC requires:

- Microsoft Windows 8, Windows 7, Windows Vista, or Windows XP.
- eeTerminal (download from www.devicefunctions.com).

Device Driver Installation:

The software package is supplied in a compressed folder file named *USB_COM_1P_Driver* or a CD. Here are the installation steps.

- 1. If you have file USB_COM_1P_Driver, rename USB_COM_1P_Driver to USB_COM_1P_Driver.zip, extract all files to a file folder on your local disk or USB drive, double click *setup.exe* to start software installation.
- 2. If you have the software CD, insert the software CD into your computer's disc drive, the software installation will start automatically.
- 3. Follow the on-screen instructions until the setup wizard finishes.

DEVICE FUNCTIONS

- 4. Plug USB-Bluetooth adapter to the computer's USB port.
- 5. Follow the on-screen instructions if any to complete the software installation.

LED Indicator

Status Connected Waiting for Connection Configuring LED Flash Rate Solid ON Once per second 10 times per second

Power Up

First, power on the Bluetooth device that is paired with C008723, then power on C008723 adapter. The Bluetooth LED will be solid on in a while. If Bluetooth LED keeps flashing, the two devices need to be paired.

Configuration

Turn off the paired Bluetooth device if this USB-Bluetooth adapter is paired.

Step 1 Start configuration

Select Device				
USB Communications Port (COM7)(Bluetooth) TOSHIBA Software Modem (COM3)	Open Configure Cancel			
Fig 1				

Plug USB-Bluetooth adapter in a PC's USB port. Start eeTerminal. Click *File* from eeTerminal's menu bar and click *Open Device*. A *Select Device* window, Fig 1, will popup with a list of devices.

Select the COM port assigned to USB-Bluetooth adapter. This COM port has "Bluetooth" in its name. Click *Configure* button. The *Bluetooth Settings* window, Fig 2, will popup in a few seconds.

Bluetooth Settings - DeviceFunctions-32CF(0006660A32CF)		
Bluetooth F Enable Air Link Encryption PIN Code: 1234		
RS232 Baud Rate Data Bits Parity Stop Bits 115200 • 8 • None • 1 •		
Device Pairing		
Add New Device Pair Unpair		
[Save] Cancel		
Fig 2		

DEVICE FUNCTIONS

Step 2 Configure Bluetooth adapter

- Encryption support is always enabled. The paired device must also support link encryption in order to set an encrypted connection.
- Authentication pin code is 1234. Authentication is turned off by default.
- RS232 settings. Set virtual COM port's baud rate, parity, and stop bits.
- Device Pairing. In order to make a Bluetooth connection, two Bluetooth devices must be paired. Click Add New Device button. Visible Bluetooth devices in range will be listed in a few seconds. You may need to click Add New Device multiple times to find Bluetooth devices. Select a Bluetooth device and click Pair button.
- Device Unpairing. Click *Unpair* button if enabled to erase pairing information.
- Step 3 Save Bluetooth adapter's settings

Click *Save* button to save new settings or click *Cancel* button to cancel any modification. The new settings will take effect immediately once saved.

Accessories

eeTerminal: Configure, read, and write USB-Bluetooth adapter. Upload/download files.

Rue •Tx	COMTerminal - [C1-01 (Bluetooth)]	- 0 ×
⁶ 1 ⁶ <u>File</u> Tools Window Help		_ // ×
🍰 🖬 🕞 ট) 🔂 Data format HEX 💌 Sanat: Bluetooth 9600 Butlier: 8192 byte	
		<u>^</u>
Tx>		

Environmental Conditions

Operating temperature range	0℃ TO +55℃
Storage temperature range	-20℃ TO +70℃
Relative humidity	0% to 90%, non-condensing

©2014 Device Functions. All right reserved.